

HOTEL EMPORIUM

FLOATING DISPENSER INSTALLATION GUIDE

NON-REFILLABLE / 380ML e 12.8 FL OZ

CYLINDER BOTTLE SIZE: Ø63.3 W × 192.4 H mm


CURVE BOTTLE SIZE: Ø63.5 L × 53.3 W × 206.8 H mm

RECTANGLE BOTTLE SIZE: 67.6 L × 40 W × 203.9 H mm

BRACKET SIZE: 43 L × 12.2 W × 75.8 H mm

MATERIAL: High density polyethylene (HDPE) bottle, polyethylene and polypropylene (PE and PP) pump components, and acrylonitrile butadiene styrene (ABS) plastic bracket.

INFO: Tamper resistant bracket, magnetic locking key, and liquid level indicator window.



CYLINDER



CURVE




RECTANGLE




FLOATING DISPENSERS INSTALLATION GUIDE

PARTS INCLUDED IN INSTALLATION KIT

(SHAMPOO, CONDITIONER, AND BODY WASH ARE NOT INCLUDED)




(2)
WALL ANCHORS



(2)
SCREWS



(1)
3M TAPE



(1)
KEY



(1)
BRACKET





(1)
380ML BOTTLE

RECOMMENDED PLACEMENT GUIDE

ON THE BACK WALL, OPPOSITE OF THE SHOWER HEAD
(NOT TO SCALE)

Dispensers should be mounted no higher than 48 inches from the floor to the pump of the dispenser to help support accessibility guidelines under the Americans with Disabilities Act (ADA).

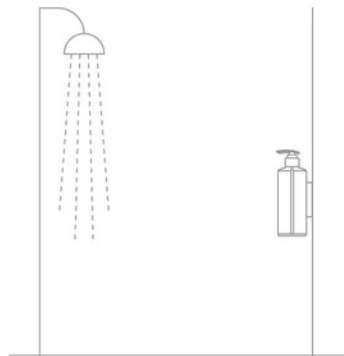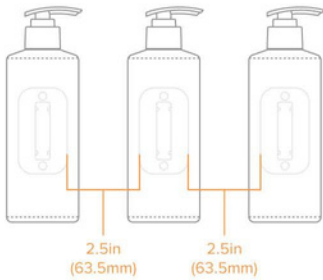

RECOMMENDED TOOLS



ALCOHOL
WIPE



LEVEL




TAPE
MEASURE



TAPE



CAULK



POWER
DRILL



HAMMER



SCREW
DRIVER

ADDITIONAL INFO


Do not use a corrosive detergent.
Use a soft damp cloth, warm water, and mild cleaner to clean bottles and brackets.
Recommended installation is mounting bracket with both screws and tape.

1



Clean surface with alcohol wipe.
Make sure surface is fully dry before installation.



2

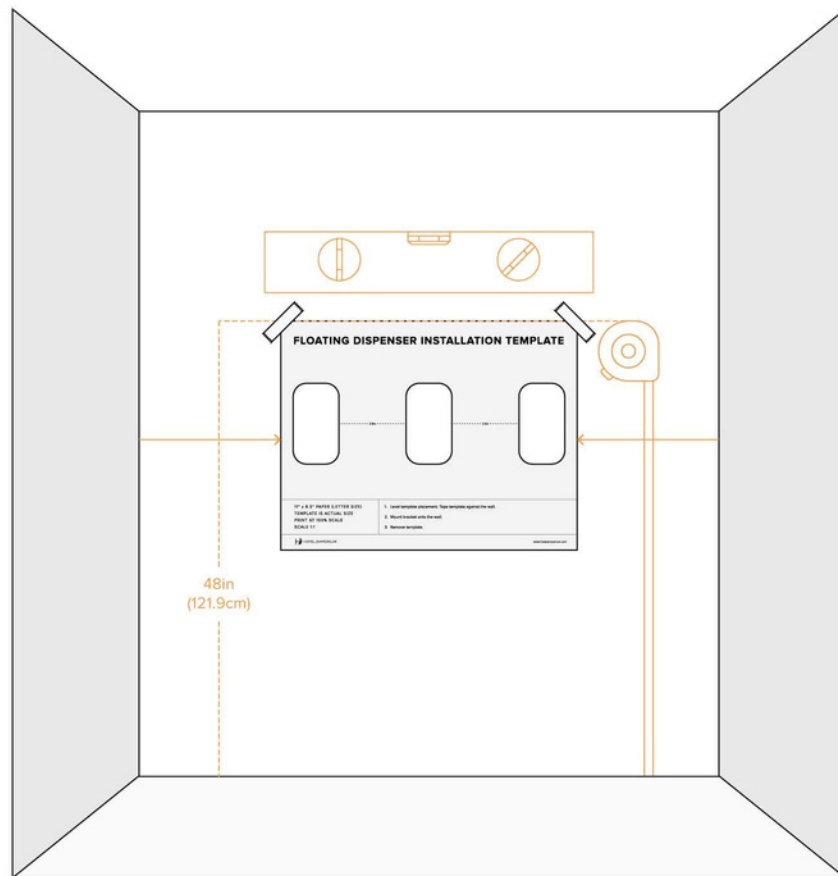

Determine the proper placement of the dispenser. Attach the template to the wall and ensure the template is level. Hotel Emporium recommends a mounting height of 48 inches from the floor to the pump of the dispenser to help support accessibility guidelines.¹

¹ Refer to www.ada.gov/law-and-regs/design-standards/2010-stds to identify accessibility requirements under the Americans with Disabilities Act (ADA).


3A

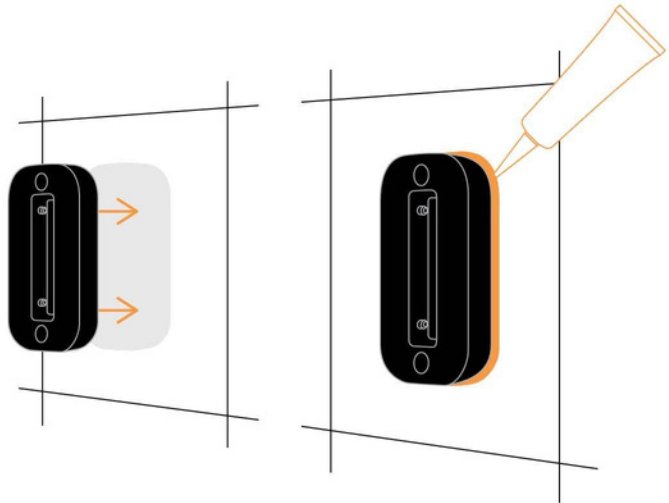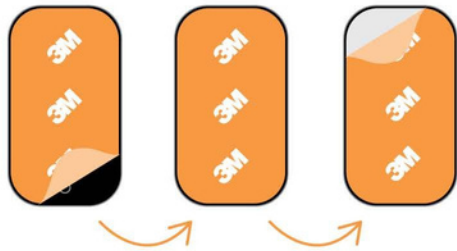

Tape Installation

1. For tape installation, clean back of bracket then adhere the double sided 3M mounting tape to the bracket. Peel film off.
2. Press bracket firmly onto the wall for 30 seconds until it is secured. Repeat process for other brackets. Remove template.
3. **Place a line of adhesive caulk** around the bracket to help prevent water and grime from getting behind the bracket. Wipe away any excess caulk. **Wait 72 hours** before inserting the bottles to help allow the tape to securely set.


3B

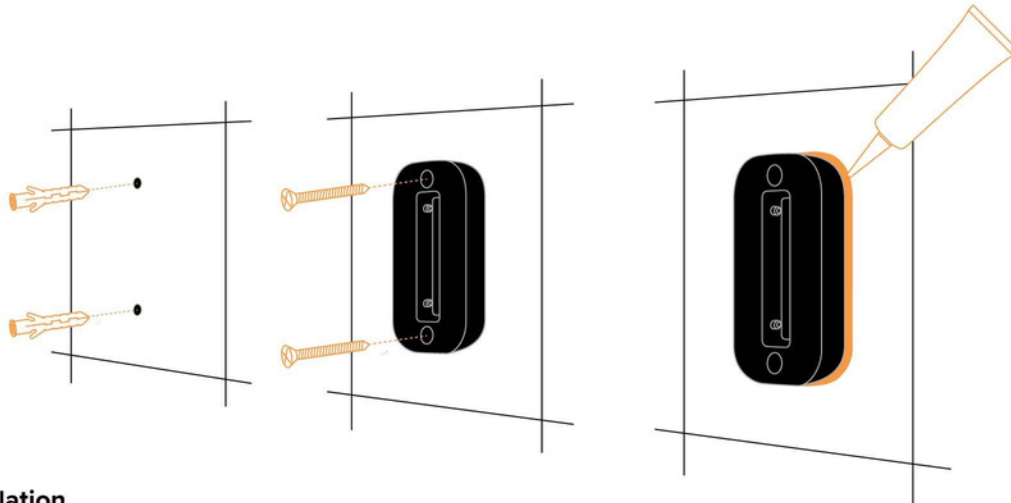

Screw Installation

1. For screw installation, use bracket to mark the bracket holes on the wall. Drill bracket holes into the wall.
2. Screw in wall anchors with your hands, then use a hammer to tap anchors flush into the wall.
3. Place bracket into position on the wall and use a screwdriver to tighten screws in place.
4. **Place a line of adhesive caulk** around the bracket to help prevent water and grime from getting behind the bracket. Wipe away any excess caulk. **Wait 72 hours** before inserting the bottles to help allow the tape to securely set.


4

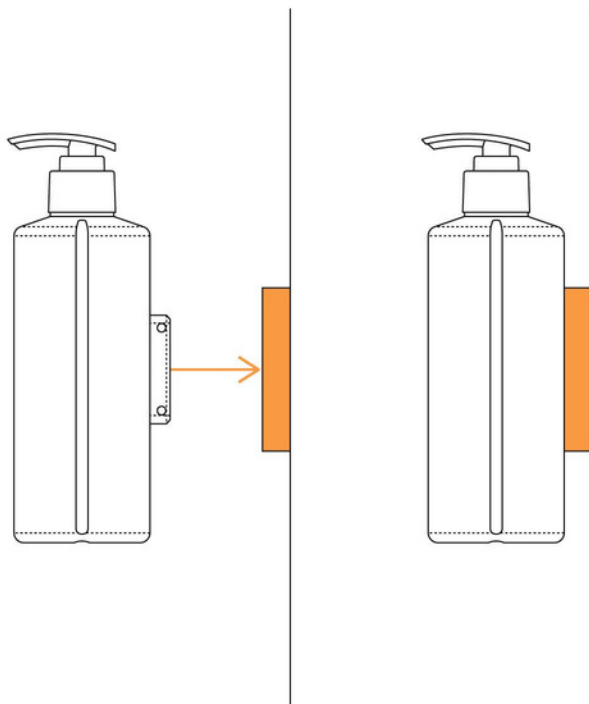

Push the bottle into the bracket where the backing fits into the bracket crevice and it clicks into place.

Dispenser is ready to use!

5

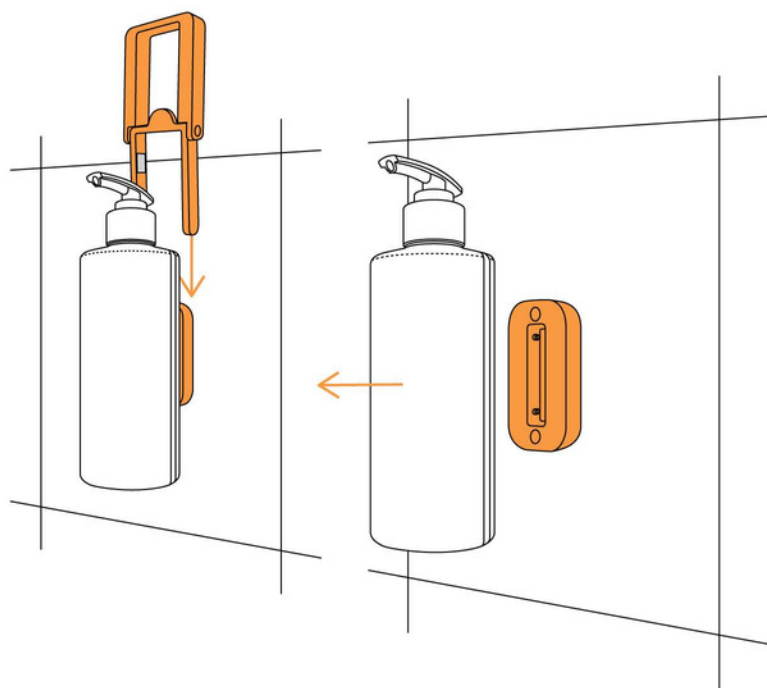

Open the magnetic key and with one hand on the bottle, slide the key to fit the entire sides of the bracket to release the bottle. Remove the emptied bottle from the bracket and replace with a new bottle.

REMOVAL

RECOMMENDED TOOLS — TAPE REMOVAL



3M ADHESIVE
REMOVAL SPRAY
or any surface safe
adhesive remover



DENTAL
FLOSS



SCRAPER
TOOL



ALCOHOL
WIPE

RECOMMENDED TOOLS — SCREW REMOVAL



SCREWDRIVER
TOOL




SCRAPER
TOOL




ALCOHOL
WIPE


TAPE REMOVAL

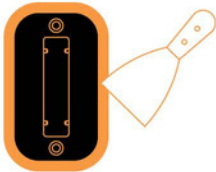

For tape removal,
remove the caulk with
the scraper tool.

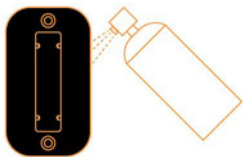

Apply a surface of safe
adhesive remover on
the back of the bracket.

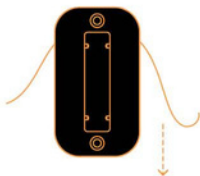


Use dental floss to slice
through the adhesive
and the bracket,
stopping at the base.
Remove the bracket.




Use the scraper tool to
carefully remove any
remaining residue on
the wall, then wipe the
surface area clean.


SCREW REMOVAL

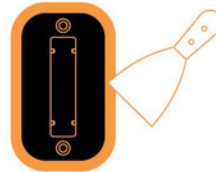

For drill removal,
remove the caulk with
the scraper tool.

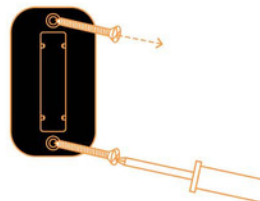

Use the screwdriver to
unscrew the bracket.
Remove the bracket.

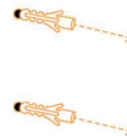


Remove the wall
anchors from the wall.



Wipe the surface
area clean.

DISCLAIMER: Installation methods may vary based on wall surface and site conditions.
Installer is responsible for ensuring proper mounting and compliance with local codes.
Hotel Emporium is not liable for damage resulting from improper installation.

FLOATING DISPENSER INSTALLATION TEMPLATE

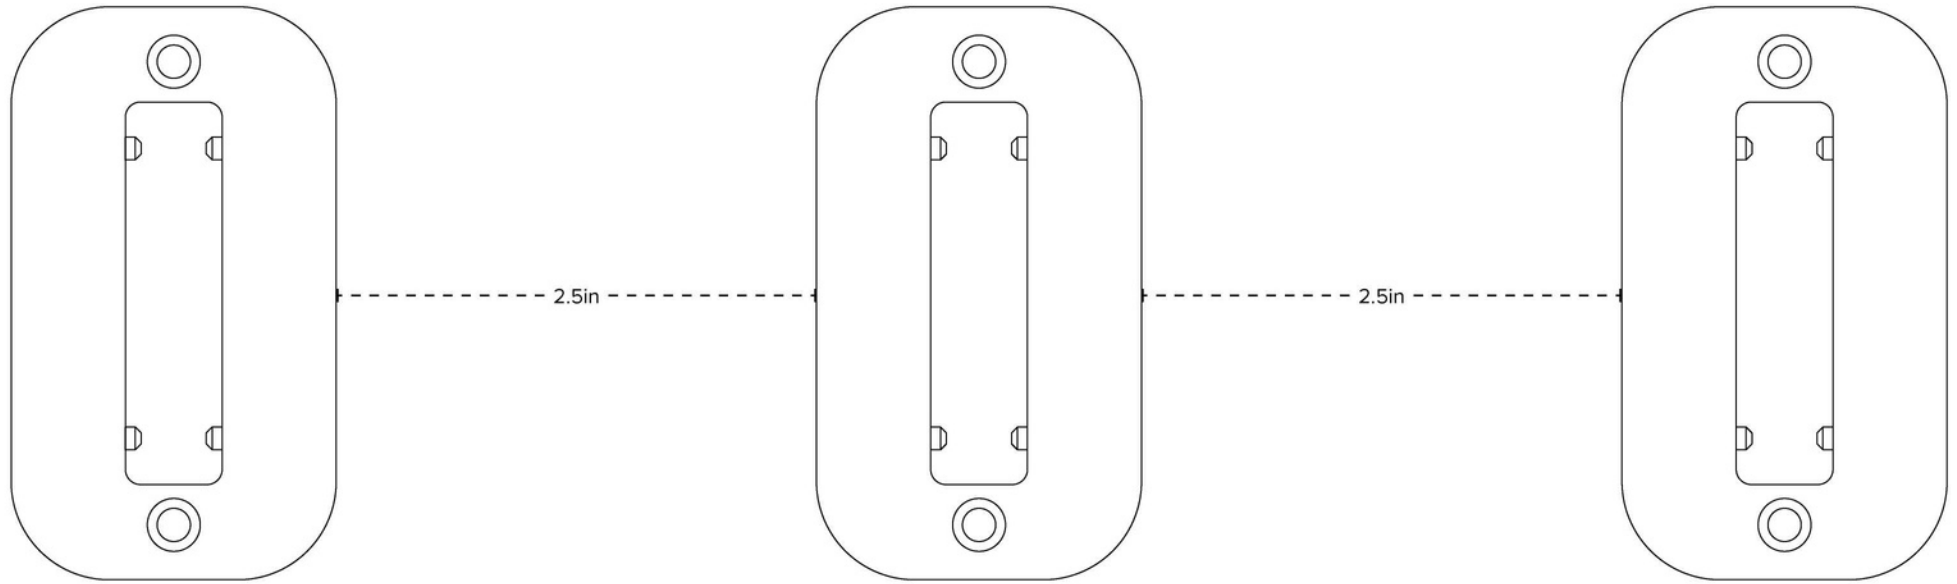

11" x 8.5" PAPER (LETTER SIZE)
TEMPLATE IS ACTUAL SIZE
PRINT AT 100% SCALE
SCALE 1:1

1. Level template placement. Tape template against the wall.
2. Mount bracket onto the wall.
3. Remove template.