

VANITY-TOP DISPENSER INSTALLATION GUIDE

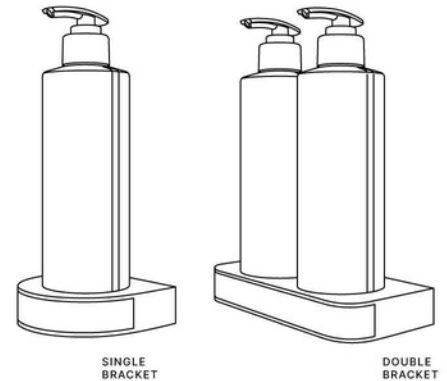
NON-REFILLABLE
360ML e 12.17 FL OZ

BOTTLE SIZE: Ø58 X 173 H (mm) **SINGLE BRACKET SIZE:** 92 L x 86 W x 24 H (mm)

DOUBLE BRACKET SIZE: 165 X 77 W x 24 H (mm)

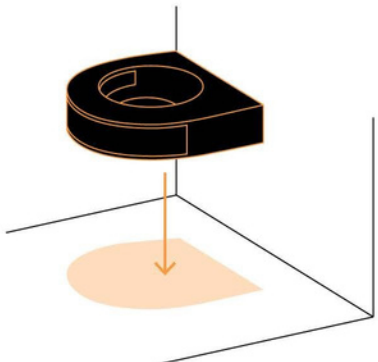
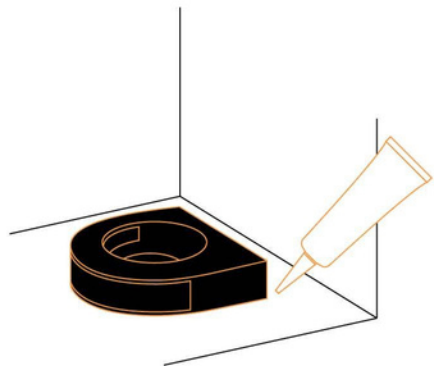
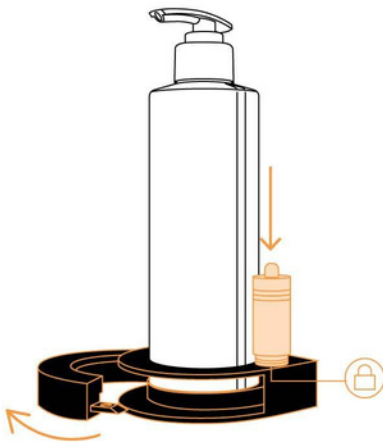
MATERIAL: High density polyethylene (HDPE) or polyethylene terephthalate (PET) bottle, polypropylene (PP) pump components, and acrylonitrile butadiene styrene (ABS) plastic bracket.

INFO: Tamper-resistant Magnetic Locking System



VANITY-TOP DISPENSER INSTALLATION GUIDE

PARTS	TOOLS	MAGNET KEY INFO
 BRACKET 3M TAPE KEY BOTTLE	 ALCOHOL WIPE CAULK	 Avoid contact between the magnetic key and all electronic devices, including electronic access cards such as hotel key cards. Store the magnetic key on the cleaning trolley handle when not in use.
ADDITIONAL INFO		
Do not use a corrosive detergent. Use a soft damp cloth, warm water, and mild cleaner to clean bottles and brackets.		

1  Clean surface with alcohol wipe. Make sure surface is fully clean and dry before installation.	2  For tape installation, clean the bottom of the bracket then adhere the double sided 3M mounting tape to the bracket. Peel film off.	3  Press bracket firmly onto the countertop for 30 seconds until it is secured.
4  Place a line of adhesive caulk around the bracket to help prevent water and grime from getting under the bracket. Wipe away any excess caulk. Wait 72 hours before inserting the bottles to help allow the tape to securely set.	5  Unscrew magnetic key cap and place key on the lock symbol to unlock the bracket. Open bracket arm and place the bottle inside. Close the arm and remove key. Dispenser is ready to use!	

DISCLAIMER: Installation methods may vary based on wall surface and site conditions. Installer is responsible for ensuring proper mounting and compliance with local codes. Hotel Emporium is not liable for damage resulting from improper installation.