

HOTEL EMPORIUM

ELEVÉ DISPENSER INSTALLATION GUIDE

REFILLABLE & NON-REFILLABLE
500ML e 16.9 FL OZ

BOTTLE SIZE: Ø76 W × 184 H mm

BRACKET SIZE: 82 L × 105 W × 172 H mm

MATERIAL: High density polyethylene (HDPE) bottle and acrylonitrile butadiene styrene (ABS) plastic bracket.


INFO: Tamper resistant bracket design and liquid level indicator windows.




ELEVÉ DISPENSER INSTALLATION GUIDE

PARTS INCLUDED IN INSTALLATION KIT

(SHAMPOO, CONDITIONER, AND BODY WASH ARE NOT INCLUDED)

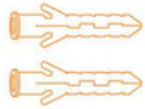

(2)
WALL ANCHORS

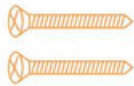

(2)
SCREWS



(1)
3M TAPE



(1)
KEY




(1)
BRACKET



(1)
BOTTLE
(Sold Separately)

RECOMMENDED PLACEMENT GUIDE

ON THE BACK WALL, OPPOSITE OF THE SHOWER HEAD
(NOT TO SCALE)

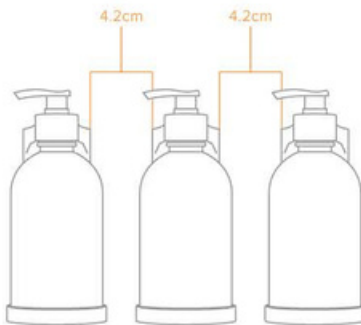

48in max
(121.9cm)

Dispensers must be mounted no higher than 48" from the floor to the pump of the dispensers, to help meet ADA compliance¹ requirements.

¹ Source: www.ada.gov/law-and-regs/design-standards/2010-stds

RECOMMENDED TOOLS



ALCOHOL
WIPE



LEVEL



TAPE
MEASURE



TAPE



CAULK



POWER
DRILL



HAMMER



SCREW
DRIVER

ADDITIONAL INFO

Do not use a corrosive detergent.
Use a soft damp cloth, warm water, and mild cleaner to clean bottles and brackets.
Recommended installation is mounting bracket with both screws and tape.


ELEVÉ DISPENSER INSTALLATION GUIDE

1




Clean surface with alcohol wipe to remove any grime and soap buildup.
Make sure surface is fully dry before installation.

2

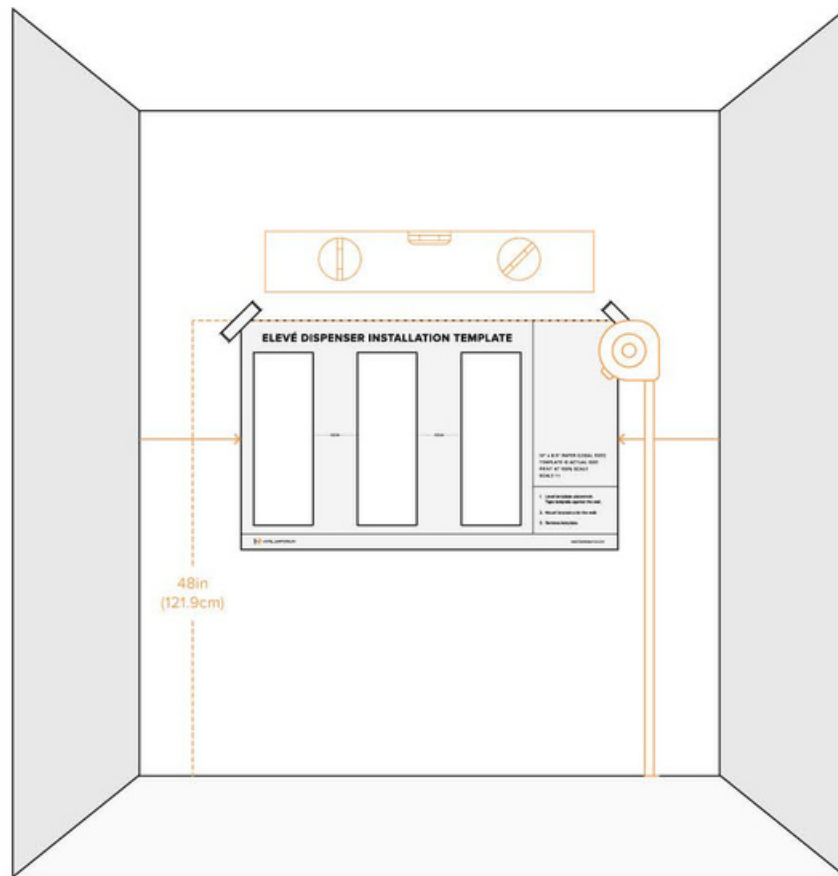


Determine the proper placement of dispenser. Attach template to the wall and make sure template is level. Hotel Emporium recommended height is 48" from the floor to the pump of the dispensers¹.

¹ Refer to www.ada.gov/law-and-regs/design-standards/2010-stds to identify ADA compliance requirements.

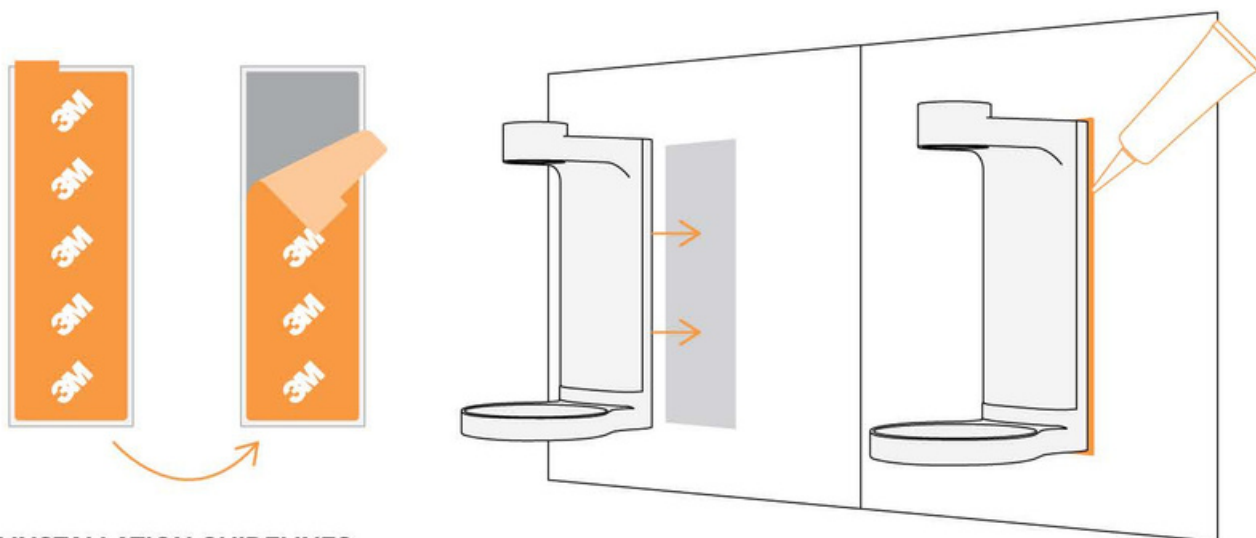


TAPE INSTALLATION GUIDELINES

1. After ensuring the wall is clean and completely dry, peel film off the 3M mounting tape on the back of the bracket.
2. Press bracket firmly onto the wall for 30 seconds until it is secured. Repeat process for other brackets. Remove template.
3. Place a line of adhesive caulk around the bracket to help prevent water and grime from getting behind the bracket. Wipe away any excess caulk. **Wait 72 hours** before inserting the bottles to help allow tape to securely set.

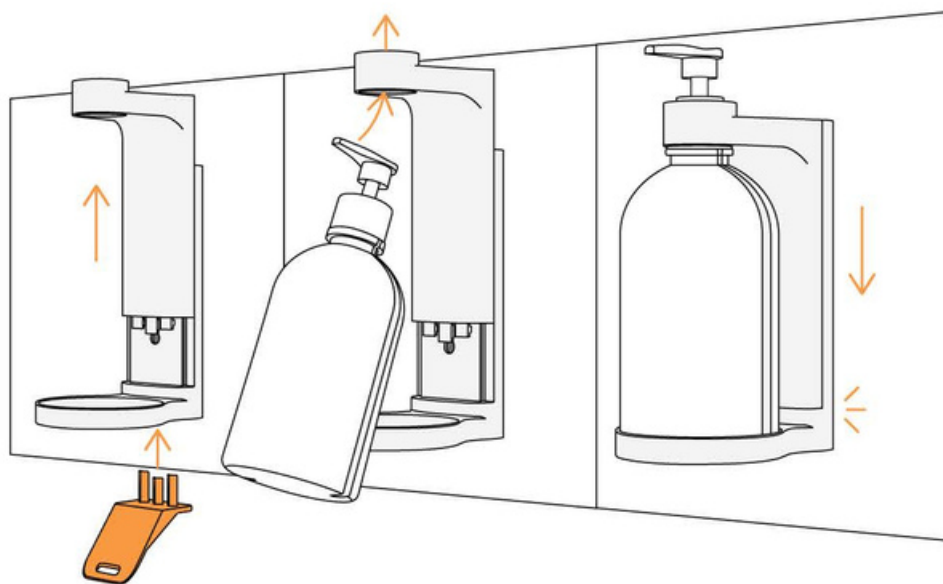


4. Insert the 3-prong key into the keyholes at the bottom back of the bracket. Push up until you feel the locking mechanism release, then push up the upper part of the bracket.
5. Unlock and release the pump. Guide the pump through the upper bracket's collar, then place the bottle on the bottom tray.
6. Push the upper bracket down until it clicks into place. **Dispenser is ready to use!**

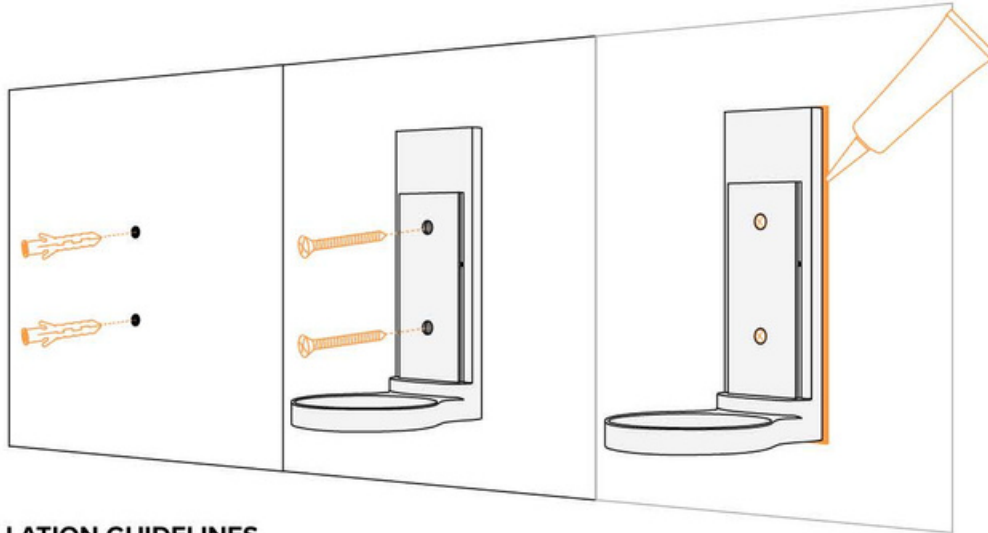


SCREW INSTALLATION GUIDELINES

1. For screw installation, use bracket to mark the bracket holes on the wall. Drill bracket holes into the wall.
2. Screw in wall anchors with your hands, then use a hammer to tap anchors flush into the wall.
3. Place bracket into position on the wall and use a screwdriver to tighten screws in place.
4. **Place a line of adhesive caulk** around the bracket to help prevent water and grime from getting behind the bracket. Wipe away any excess caulk. **Wait 24 hours** for caulk to dry.

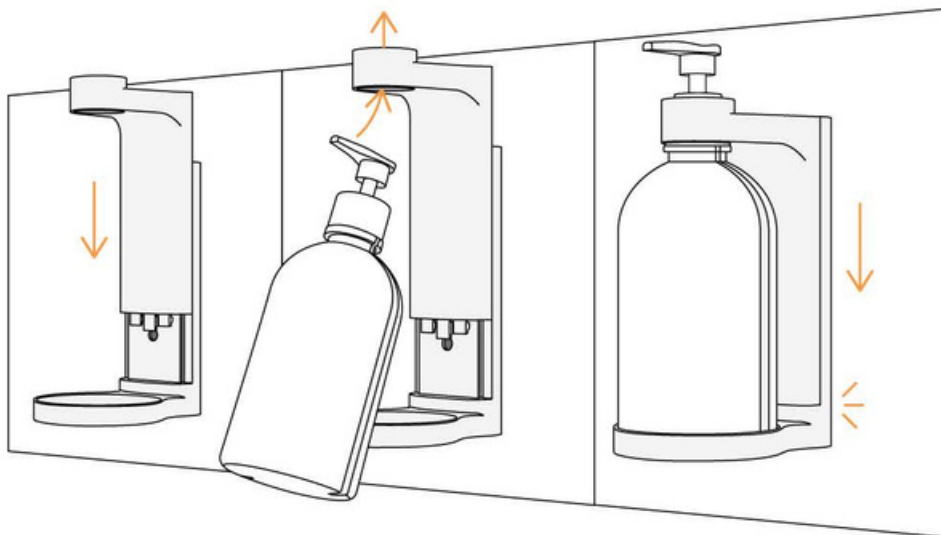

4. Hold the mounted part of the bracket for support. Slide the upper bracket onto the bottom part of the bracket, aligning the inner grooves, and push it halfway down.
5. Unlock and release the pump. Guide the pump through the upper bracket's collar, then place the bottle on the bottom tray.
6. Push the upper bracket down until it clicks into place. **Dispenser is ready to use!**

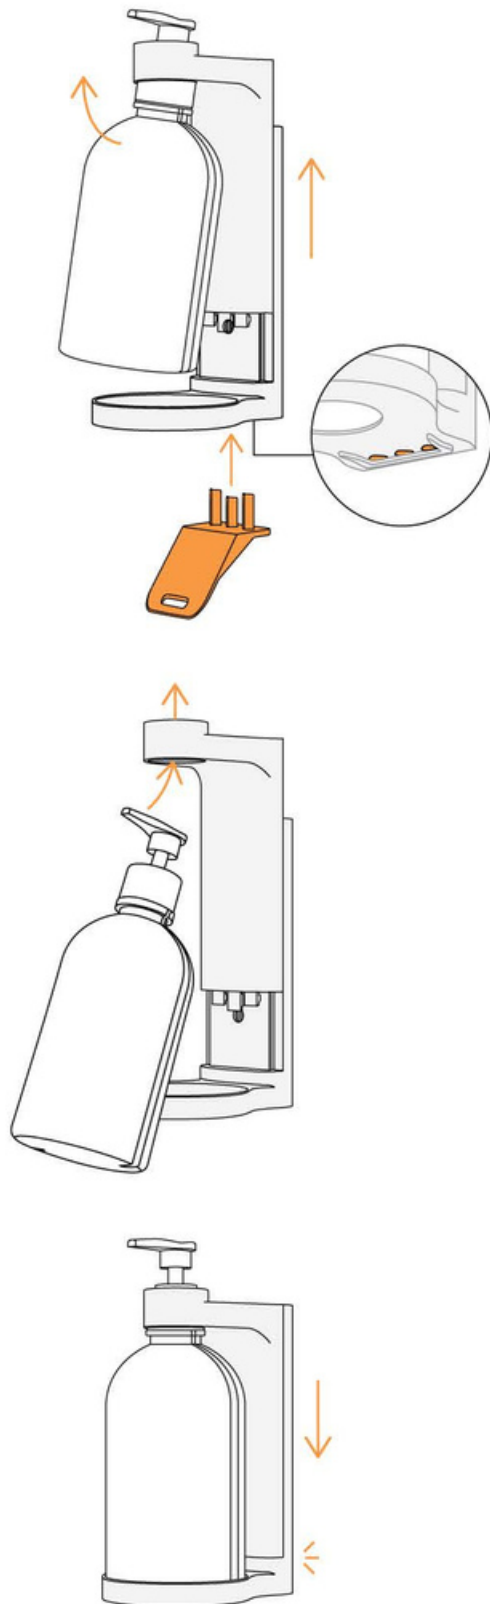

REPLACING/REFILLING THE BOTTLES

1. Insert the 3-prong key into the keyholes at the bottom back of the bracket. Push up until you feel the locking mechanism release, then push up the upper part of the bracket. Remove the bottle.


2a. Clean the bracket and replace liquids with a new bottle.

2b. Clean the bracket. Unscrew cap to refill liquids to the desired amount.

3. Unlock and release the pump. Guide the pump through the upper bracket's collar, then place the bottle on the bottom tray.

4. Push the upper bracket down until it clicks into place.
Dispenser is ready to use again! Clean and recycle the used bottle.

ELEVÉ DISPENSER INSTALLATION TEMPLATE

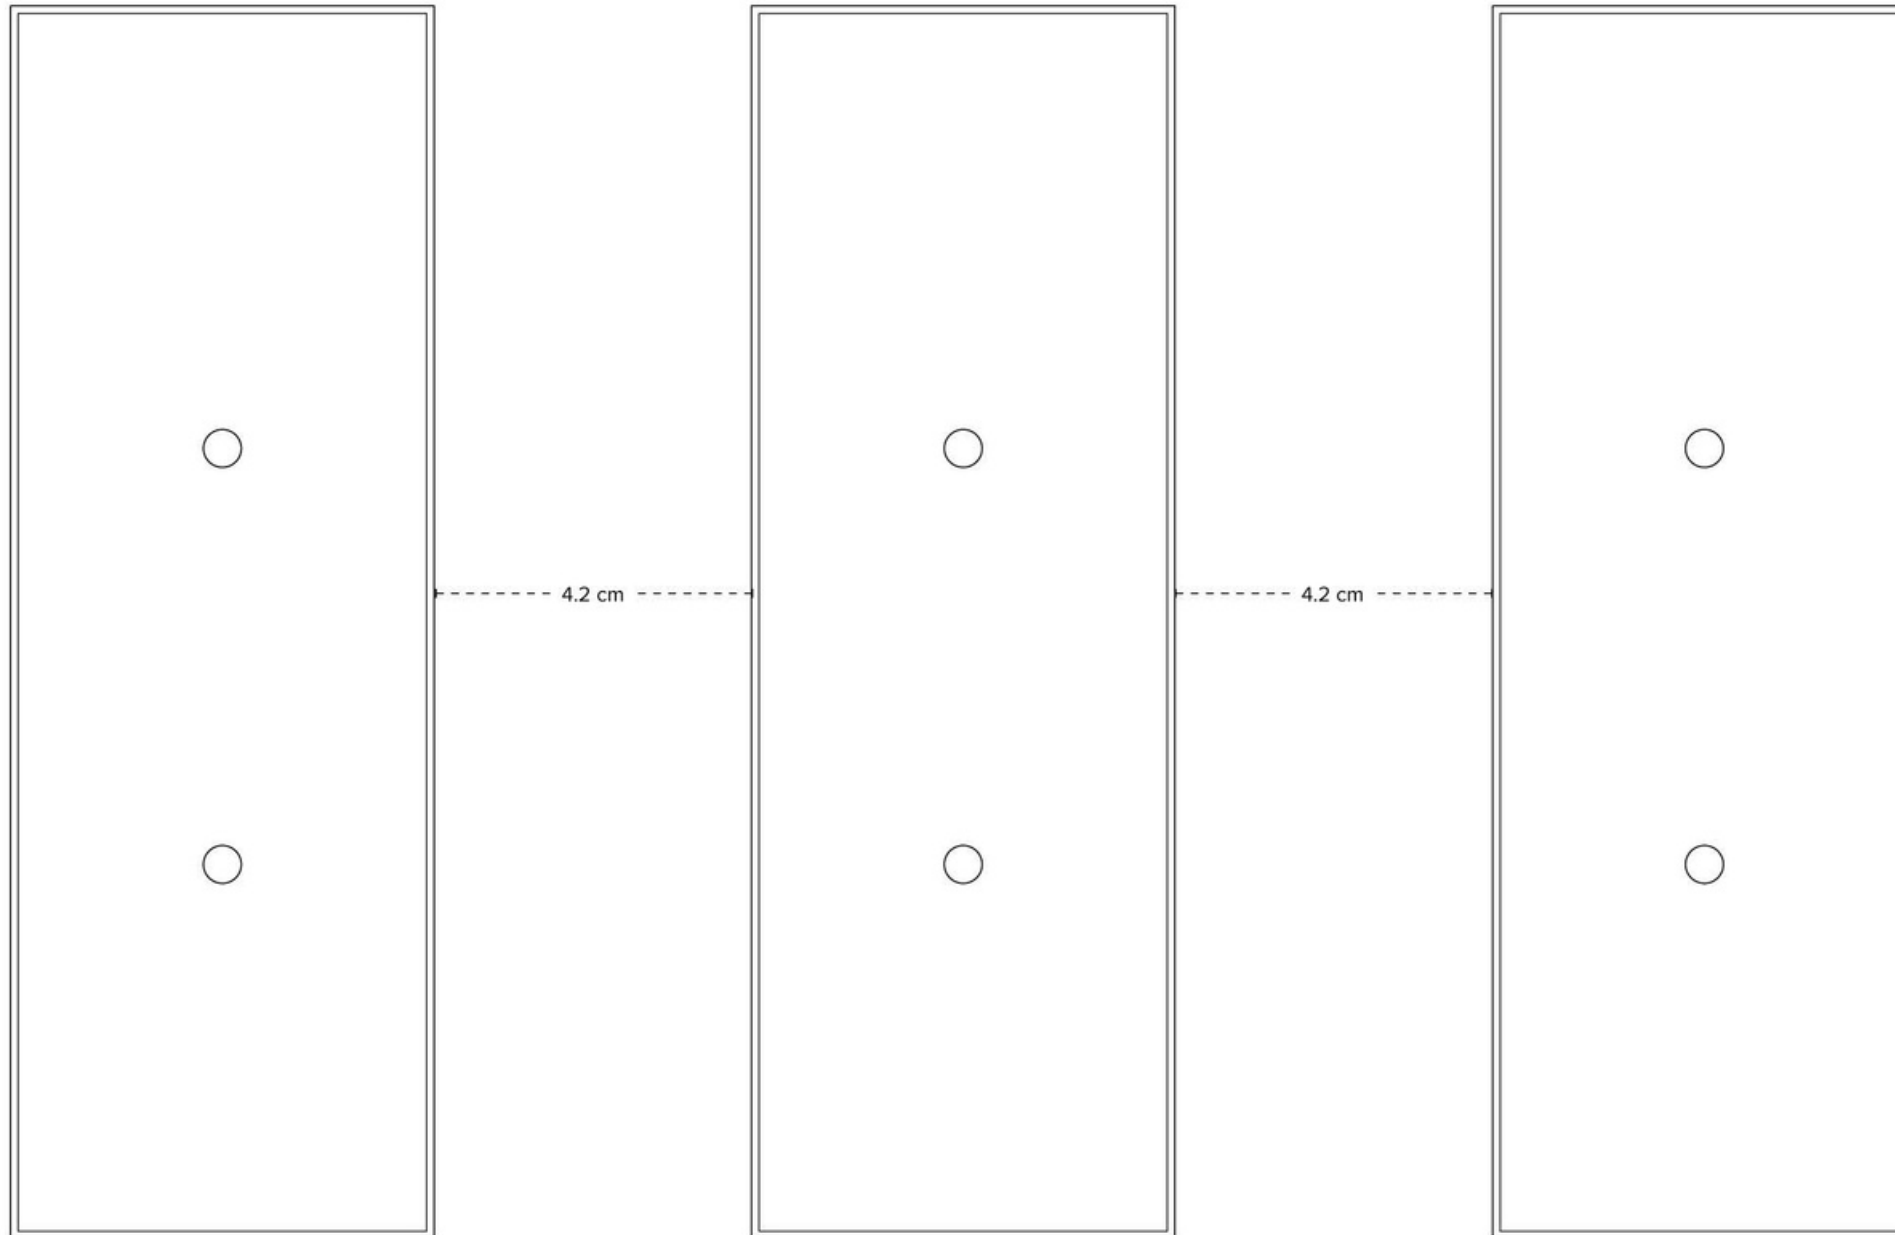

14" x 8.5" PAPER (LEGAL SIZE)
TEMPLATE IS ACTUAL SIZE
PRINT AT 100% SCALE
SCALE 1:1

1. Level template placement.
Attach template to the wall.
2. Mount bracket onto the wall.
3. Remove template.